





# HOW TO SHARE THE NETWORK FROM A COMPUTER TO A TRINNOV PROCESSOR

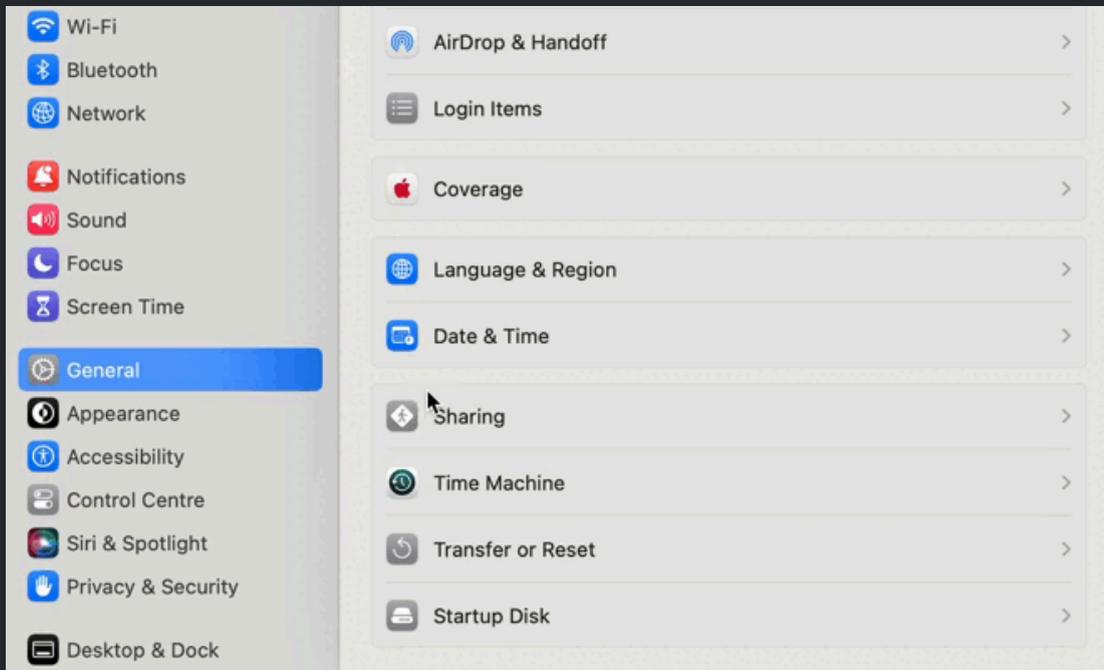


1. On your Mac, choose the Apple menu  > System Settings, click General  in the sidebar, then click Sharing on the right .



2. Turn on Internet Sharing, then click Turn On to confirm

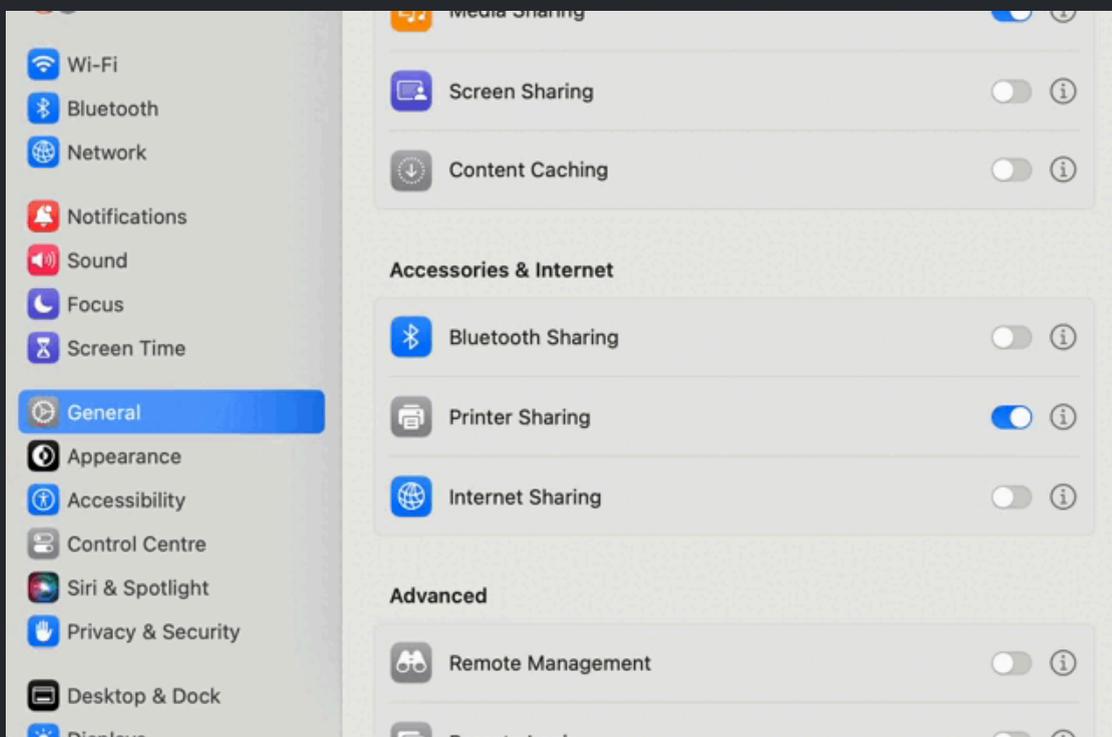

3. Click the Info button  next to Internet Sharing.

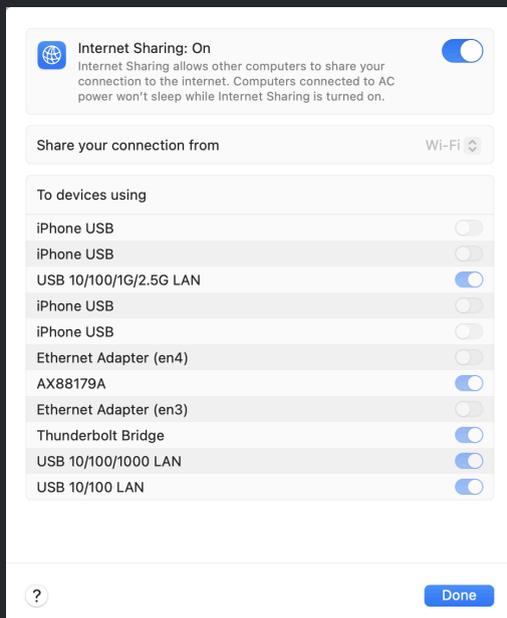

Click the “Share your connection from” pop-up menu, then choose the internet connection you want to share . For example, if you’re connected to the internet over WI-FI select WI-FI.

Then select the right device where your Trinnov processor is connected to .

4. Now, be sure that your processor is currently plugged and on Auto DHCP (NOVA example)

